

INSTRUCTIONS FOR USE AND RECOVERY OF LAUNCHES

1. MONEYPENNY LAUNCH USE AND RECOVERY

To launch Moneypenny

- Sign the launch out
- Before launching ensure motor is raised
- There are two straps: the blue winch strap which is marked to show how far to winch boat onto the trolley and the black strap which goes laterally across the launch at the bow end.
- Keep both retaining straps fastened until bottom of slipway
- Once in water, lower motor and start engine

To start the engine

- Push key in once and release to set choke
- Lift fast idle lever
- Check red warning light is off, and coolant water is flowing
- Warm engine at low speed i.e. below 2000 rpm
 - for 3 minutes at air temp above 5 °C
 - for 5 minutes at temp 5 °C and below
 - Lower fast idle lever and move off

To remove Moneypenny from the water

- Lift motor from water before getting off the launch
- Fix both retaining straps before pulling launch up slipway
- At top of slipway lower motor to drain coolant

Please note the makers of Moneypenny advise that to reduce the risk of capsizing, someone should be in the driver's seat when rescuing a person and that the person is recovered on the opposite side to the driver.

Remember, all the club standard launch checks still apply.

Author: Len Small

Date: March 2026